


LOOP INSTALLATION PROCEDURE


- Loops shall be centered in lanes.
- Saw slots in pavement for loop conductors as shown in details.
- Distance between side of loop and a lead-in saw cut from adjacent detectors shall be 600 mm minimum. Distance between lead-in saw cuts shall be 150 mm minimum.
- Bottom of saw slot shall be smooth with no sharp edges.
- Slots shall be washed until clean, blown out and thoroughly dried before installing loop conductors.
- Adjacent loops on the same sensor unit channel shall be wound in opposite directions.
- Identify and tag loop circuit pairs in the pull box with loop number, start (S) and finish (F) of conductor. Identify and tag lead-in-cable with sensor number and phase.
- Install loop conductor in slot using a 5 mm to 6 mm thick wood paddle. Hold loop conductors with wood paddles (at the bottom of the sawed slot) during sealant placement.
- No more than 2 twisted pairs shall be installed in one sawed slot.
- Allow additional 1.5 m of slack length of conductor for the lead-in run to pull box.
- The additional length of each conductor for each loop shall be twisted together into a pair (6 turns per meter minimum) before being placed in the slot and conduit leading to pull box.
- Test each loop circuit for continuity, circuit resistance and insulation resistance at the pull box before filling slots.
- Fill slots as shown in details.
- Splice loop conductors to lead-in cable. Splices shall be soldered.
- End of lead-in-cable and Type 2 loop conductor shall be waterproofed prior to installing in conduit to prevent moisture from entering the cable.
- Lead-in-cable shall not be spliced between the pull box and the controller cabinet terminals.
- Test each loop circuit for continuity, circuit resistance and insulation resistance at the controller cabinet location.
- Where loop conductors are not to be spliced to a lead-in-cable, the ends of the conductors shall be taped and waterproofed with electrical insulating coating.

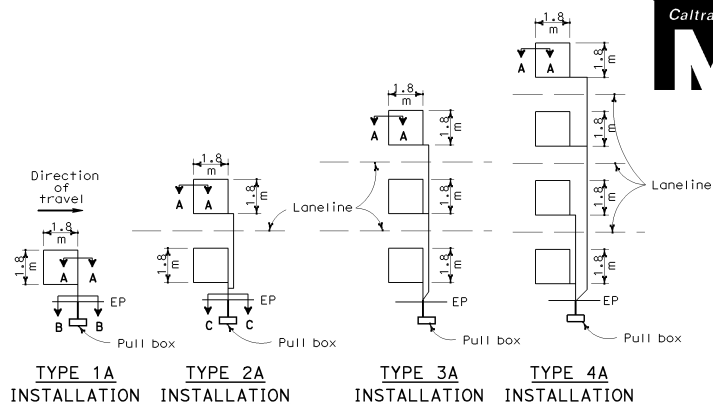

SAWCUT DETAILS


(Type A loop detector configurations illustrated)

- 1A thru 4A = 1 Type A loop configuration in each lane.
 - 1B thru 4B = 1 Type B loop configuration in each lane.
 - 1C = 1 Type C loop configuration entering lanes as required.
 - 1D thru 4D = 1 Type D loop configuration in each lane.
 - 1E thru 4E = 1 Type E loop configuration in each lane.
 - 10 thru 40 = 1 Type O loop configuration in each lane.
- (Use Type A, B, C, D, E or O loop detector configurations only when specified or shown on plans)

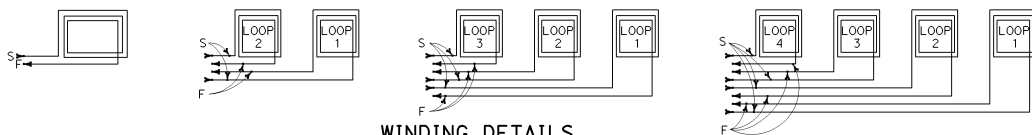


WINDING DETAILS

See Notes 6 and 7

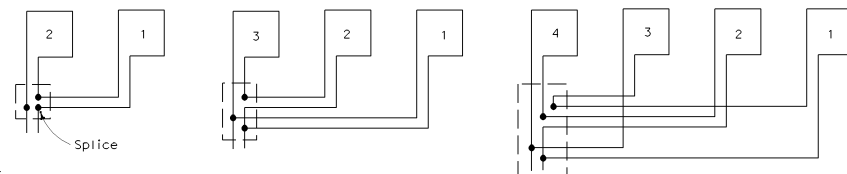

TYPICAL LOOP CONNECTIONS

(Dashed lines represent the pull box)

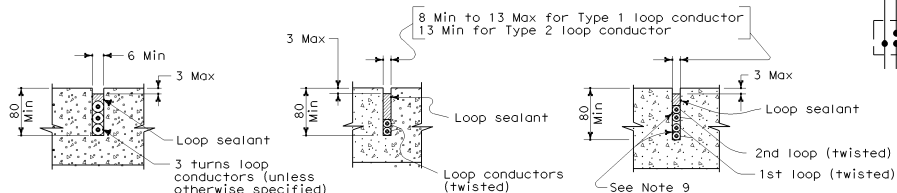

SECTION A-A

SECTION B-B

SECTION C-C

SLOT DETAILS - TYPE 1 AND TYPE 2 LOOP CONDUCTOR



| | | | | |
|---|--------|-------|------------------------------|------------------------|
| DIST | COUNTY | ROUTE | KILOMETER POST TOTAL PROJECT | SHEET TOTAL NO. SHEETS |
| <p>Caltrans metric</p> <p><i>Mark V. Styer</i> REGISTERED ELECTRICAL ENGINEER</p> <p>July 1, 2004 PLANS APPROVAL DATE</p> <p>The State of California or its officers or agents shall not be responsible for the accuracy or completeness of electronic copies of this plan sheet.</p> <p>To get to the Caltrans web site, go to: http://www.dot.ca.gov</p> | | | | |

STATE OF CALIFORNIA
DEPARTMENT OF TRANSPORTATION
**ELECTRICAL SYSTEMS
(DETECTORS)**

NO SCALE
ALL DIMENSIONS ARE IN
MILLIMETERS UNLESS OTHERWISE SHOWN